


B

A

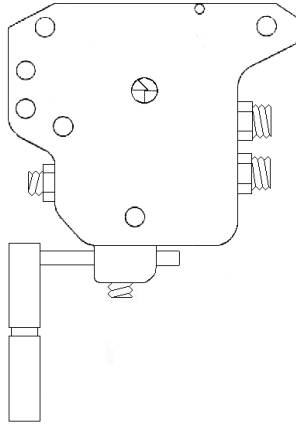

**Timney® Triggers LLC.**  
**Remington 600 & 700 Tactical Trigger**  
**Installation Instructions**

1. Unload rifle, and be sure that the chamber and magazine are also empty. Remove all screws holding the stock to the barreled action. Remove the bolt and then remove the action from the stock.
2. Remove the stock trigger assembly from the action by driving the two mounting pins out of the receiver (note that the rear pin is in line with the safety, move the safety out of the way to avoid bending or breaking it).
3. The front trigger mounting hole (A) has a keeper pin in place to make it easy to drive the mounting pin. Insert the Timney trigger into the slot in the receiver and carefully align the front mounting pin with the front mounting hole. Push in the original pin (it's the shorter of the two pins), driving the keeper pin out of the hole. Do the same thing with the back pin (B), making sure that it slides in place with a light tap of the hammer. If it takes more than a light tap to seat the pin it may deform the housing, causing the sear levers to bind. If this is the case use a punch to push

the housing sides outward until the trigger operates normally.

4. The top screw (1) is for overtravel adjustment, please don't adjust it. It has been adjusted at the factory for optimal performance.
5. The bottom screw (2) is for pull weight, backing the screw out will decrease the pull weight, turning the screw in will increase the weight of pull.
6. The back screw (3) is to adjust the sear engagement. We have tested and calibrated the trigger on a rifle action at the factory to deliver optimum performance with a minimum amount of creep.
7. Your rifle should now be ready to reassemble. In replacing the stock it may be necessary to remove some stock material in order to allow the trigger to seat properly. Please check this clearance after tightening the stock screws to allow for proper operation of the trigger.
8. The trigger bar is adjustable for length of pull and angle. Feel free to set the trigger to the spot that feels right for you.

Please note that this trigger is set up without any provision for a mechanical safety. Firearms are inherently dangerous and should be handled with safety as the utmost consideration. **Point the rifle in a safe direction at all times.**


TIMNEY® Triggers LLC  
 2020 W. Quail Ave Phoenix, AZ 85027  
 Voice (602) 274-2999 Fax (602) 241-0361  
[www.timneytriggers.com](http://www.timneytriggers.com)  
 e-mail [service@timneyusa.com](mailto:service@timneyusa.com)

**TIMNEY® ADJUSTABLE TRIGGER GUARANTEE**

Material & workmanship: This Timney® trigger has been carefully inspected, tested, and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, necessary repairs, including parts and labor will be made at no charge to the purchaser, providing that our inspection reveals the trigger was not damaged through accident, alteration, misuse, abuse, or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific factory authorization voids this warranty.

B

A

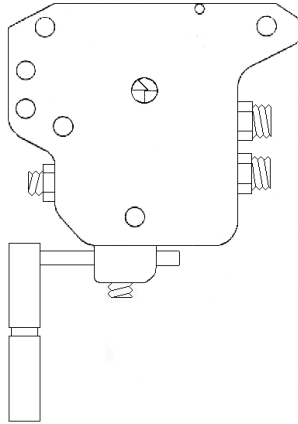

**Timney® Triggers LLC.**  
**Remington 600 & 700 Tactical Trigger**  
**Installation Instructions**

1. Unload rifle, and be sure that the chamber and magazine are also empty. Remove all screws holding the stock to the barreled action. Remove the bolt and then remove the action from the stock.
2. Remove the stock trigger assembly from the action by driving the two mounting pins out of the receiver (note that the rear pin is in line with the safety, move the safety out of the way to avoid bending or breaking it).
3. The front trigger mounting hole (A) has a keeper pin in place to make it easy to drive the mounting pin. Insert the Timney trigger into the slot in the receiver and carefully align the front mounting pin with the front mounting hole. Push in the original pin (it's the shorter of the two pins), driving the keeper pin out of the hole. Do the same thing with the back pin (B), making sure that it slides in place with a light tap of the hammer. If it takes more than a light tap to seat the pin it may deform the housing, causing the sear levers to bind. If this is the case use a punch to push

the housing sides outward until the trigger operates normally.

4. The top screw (1) is for overtravel adjustment, please don't adjust it. It has been adjusted at the factory for optimal performance.
5. The bottom screw (2) is for pull weight, backing the screw out will decrease the pull weight, turning the screw in will increase the weight of pull.
6. The back screw (3) is to adjust the sear engagement. We have tested and calibrated the trigger on a rifle action at the factory to deliver optimum performance with a minimum amount of creep.
7. Your rifle should now be ready to reassemble. In replacing the stock it may be necessary to remove some stock material in order to allow the trigger to seat properly. Please check this clearance after tightening the stock screws to allow for proper operation of the trigger.
8. The trigger bar is adjustable for length of pull and angle. Feel free to set the trigger to the spot that feels right for you.

Please note that this trigger is set up without any provision for a mechanical safety. Firearms are inherently dangerous and should be handled with safety as the utmost consideration. **Point the rifle in a safe direction at all times.**

TIMNEY® Triggers LLC.  
 2020 W. Quail Ave Phoenix, AZ 85027  
 Voice (602) 274-2999 Fax (602) 241-0361  
 www.timneytriggers.com  
 e-mail service@timneyusa.com

**TIMNEY® ADJUSTABLE TRIGGER GUARANTEE**

Material & workmanship: This Timney® trigger has been carefully inspected, tested, and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, necessary repairs, including parts and labor will be made at no charge to the purchaser, providing that our inspection reveals the trigger was not damaged through accident, alteration, misuse, abuse, or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific factory authorization voids this warranty.